

1. Download the above link to your PC (It's a ZIP File)
2. Unzip the folder to reveal 2 Folders – as below
 - (Within Windows – Right Click on the Zip file & EXTRACT ALL



- - GS7_upload
 - Upload
3. Copy the 2 above folders (GS7_upload & upload) directly onto your new SD card that you have purchased.
 4. Eject the card from windows
 5. Remove the plastic bit at the top of the G7 which is held in with small clips
 6. Remove the small rubber protection cover
 7. Insert the MicroSD card into the top of the G7 (It will only insert one way, push in until you feel it insert) and turn the unit on.
 8. You will be prompted with a few instructions – just follow these
 9. The unit will say update in progress and will reboot when done (just watch the screen)
 10. Eject the SD Card (this is done by pressing back down on the SD card it should release – It's a Spring style – push/release)
 11. If you leave the card in – it will just reboot and update all over again

If you still have issues, please contact our support line on 07 4602 4150 for further assistance.